
LUNARIA

LIGHTING LONDON

Alder Disc Pendant Light

FITTING & CARE GUIDE / V2

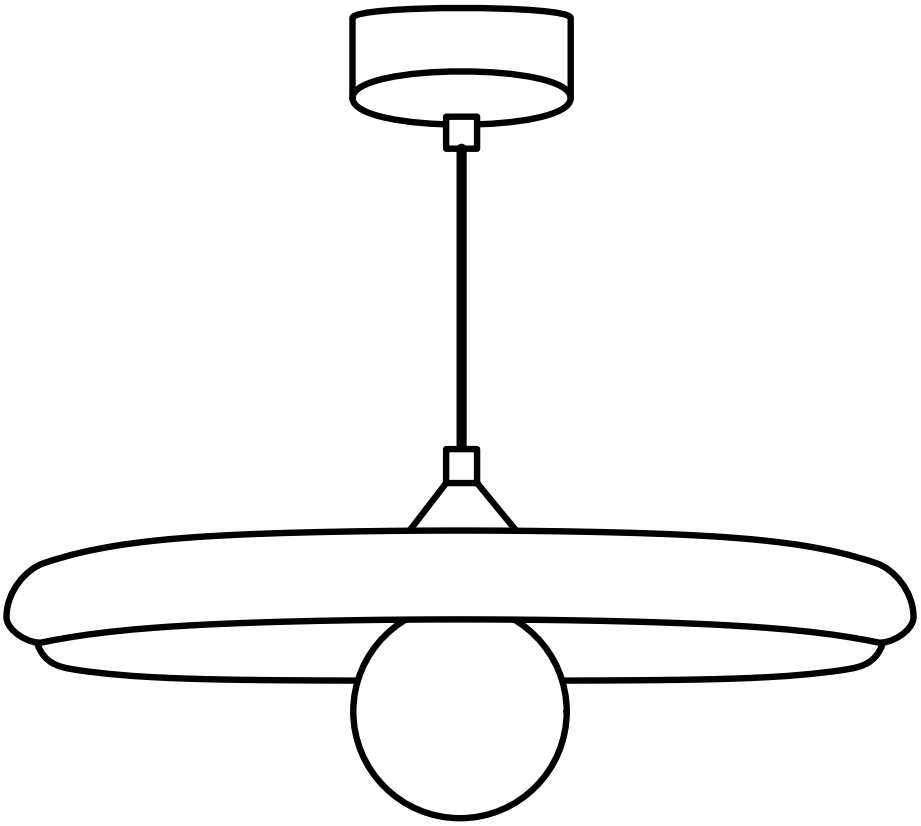


lunarialight.com

hello@lunarialight.com

01 / YOUR LIGHT AT A GLANCE

Alder Disc Pendant Light

Alder is a ceiling pendant with one shallow painted metal dish, coloured outside and white inside, hanging on a single black flex from a round black ceiling rose. One round E27 LED bulb is included and shows beneath the rim.

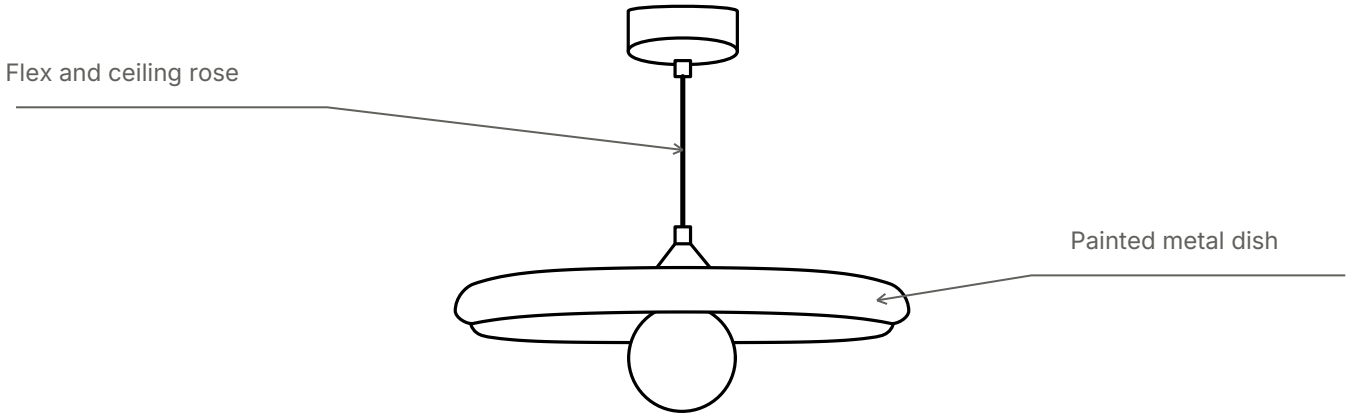

SIZE OPTIONS
20 cm or 30 cm across

COLOURS
Cream, Green or Red, white inside

SHADE
Painted metal dish

LIGHT SOURCE
One E27 LED bulb, included

FLEX
Black, 120 cm, set to length at fitting

CEILING ROSE
Black, round

Check the diameter and the colour of the dish against your order before fitting. Every colour is white inside, with the same black flex and ceiling rose, and each light comes with one E27 LED bulb in warm white.

Dish

One shallow painted metal dish, coloured on top and white inside. Lift it with two hands under the rim, never by the flex.

Lampholder and bulb

A white E27 lampholder sits under the centre of the dish. The round bulb screws into it and shows beneath the rim.

Flex and ceiling rose


A single black flex runs from the small cone on the dish to the round black ceiling rose. Keep it free of kinks.

Set the drop for what sits below

The bulb is the lowest point of the light, so decide where it should hang before anything is fixed. Over a table, sit down and check that the dish does not come between two people facing each other. Where people walk beneath it, as in a bedroom, keep it clear of the tallest head in the house.


ALDER DISC PENDANT LIGHT

Prepare & fit

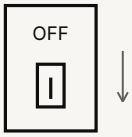


Before fitting

Switch off the lighting circuit at the consumer unit and verify it is dead. Electrical connections and testing must be completed by a competent installer. Keep the light supported until it is securely fixed.

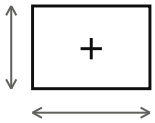

01 Check the position

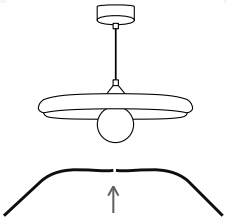

02 Support the body



03 Check before use

Unpack onto a soft surface

Lay the dish on a clean cloth, the right way up, with the flex resting loosely beside it. Check the paint, the rim and the ceiling rose for marks or dents before anything is fitted, and keep the bulb aside.

Agree the finished drop

Measure from the ceiling to where the bottom of the bulb should hang, and note the figure for whoever fits the light. Over a table, measure from the table top up to the bulb as well.

1 Check the ceiling point

Compare the ceiling rose and any mounting parts received with the existing ceiling point and the support behind it. The rose should sit flat against the ceiling once fitted.

2 Set the flex with the dish supported

Identify how the flex on your light is held at the ceiling rose before raising it. Have it set to the agreed drop while the dish is supported, so its weight never hangs from a loose flex.

3 Keep hold until the rose is secure

Have a second person hold the dish while the ceiling rose is fixed and connected. Let go only when the rose is secure and the flex takes the weight in a straight line.

4 Fit the bulb last


With the power still off, screw the bulb into the lampholder under the dish until it is snug, without forcing it. Then step back and check that the dish hangs level.

ALDER DISC PENDANT LIGHT

Use & look after

One E27 bulb, left in view

Alder works from the wall switch of the ceiling point it is fitted to. It takes one E27 bulb, and an LED bulb in warm white is included. Before fitting a different bulb, switch off, let the old one cool and check the marking on the lampholder. The light is not dimmable; do not connect it to a dimmer switch.

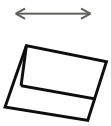

Dust the dish

With the light off and the bulb cool, wipe the painted metal with a soft, dry cloth, top and underside. Support the dish with your other hand so the flex is not pulled.



Protect the paint

Do not use sprays, solvents or abrasive pads on the coloured paint or on the white inside, and do not hang anything from the dish or from the flex.

If something needs attention

The dish hangs at a tilt	Switch off and look at the flex where it enters the small cone on top of the dish. Have the installer straighten the run of the flex; do not bend the dish to level it.
The light does not come on	Check the wall switch, then switch off, let the bulb cool and make sure it is screwed fully into the lampholder. If it stays dark, try another E27 bulb before contacting LUNARIA.
The drop is not the one you wanted	Measure the change you would like and ask the installer to reset the flex at the ceiling rose. Do not pull the flex through the rose or cut it yourself.

BEFORE SWITCHING ON

- ✓ Fitting secure
- ✓ Fragile parts stable
- ✓ No trapped cable
- ✓ Electrical checks complete