
LUNARIA

LIGHTING LONDON

Black & Gold Bare Bulb Industrial Wall Light

FITTING & CARE GUIDE / V2

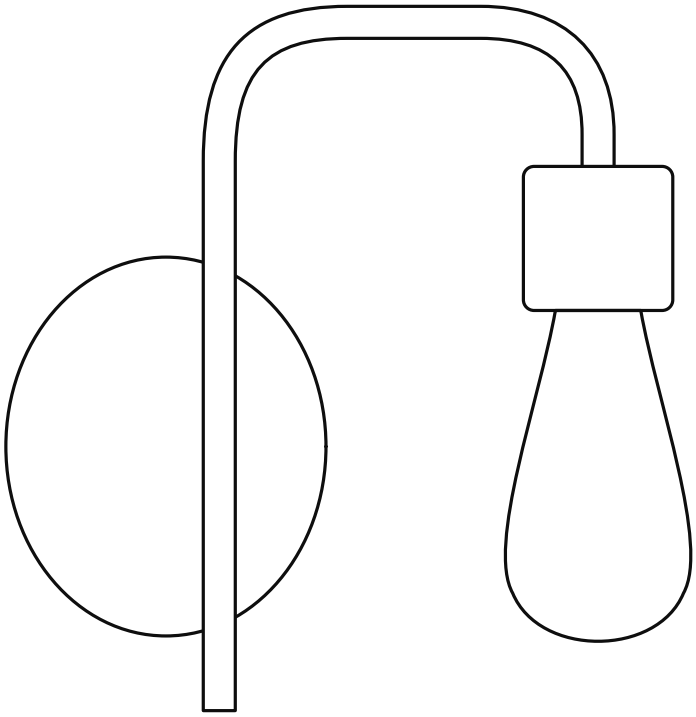


lunarialight.com

hello@lunarialight.com

01 / YOUR LIGHT AT A GLANCE

Black & Gold Bare Bulb Industrial Wall Light

This industrial wall light uses a curved metal arm and an exposed bulb instead of a shade. The bulb's size and light appearance are therefore part of the finished look, as well as a practical consideration when choosing the wall position.

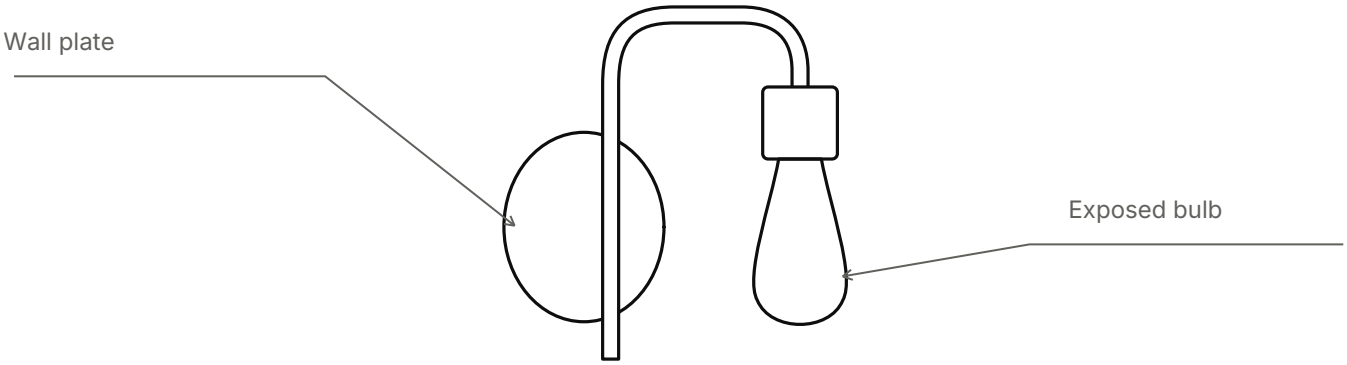

DESIGN
Exposed-bulb wall light

BULB BASE
E27

MAIN STRUCTURE
Iron arm and backplate

FINISHES
Black & Gold, Gold, Black, Gold & Black

SHADE
No separate shade

Black & Gold and Gold & Black are separate finish options. Compare the arm, holder and backplate with the ordered version, especially when installing a pair.

E27 lampholder

The metal holder receives the exposed screw-in bulb. Support the fitting without turning the holder against its arm during bulb changes.

Curved iron arm

The bent arm projects the bulb away from the wall. It is a fixed structural feature, not a handle for adjusting height.

Round backplate


The visible plate sits against the wall and carries the finish. Use the actual supplied mounting hardware to establish fixing positions.

Check the exposed bulb from eye level

Measure the fitting's full reach from the wall with the intended bulb in place. Check the route past it and the view from a chair or bed, because the bulb remains visible. Position a pair from the same reference line, and keep door swings, curtains and passing shoulders clear of the fitting.


BLACK & GOLD BARE BULB INDUSTRIAL WALL LIGHT

Prepare & fit

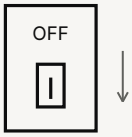


Before fitting

Switch off the lighting circuit at the consumer unit and verify it is dead. Electrical connections and testing must be completed by a competent installer. Keep the light supported until it is securely fixed.

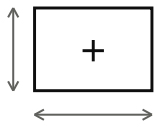

01 Check the position

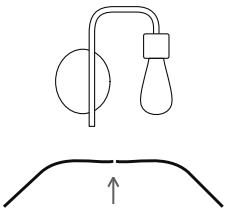

02 Support the body



03 Check before use

Choose the visible bulb deliberately

Check the holder marking before selecting an E27 bulb, then consider its physical size and light appearance. Keep the chosen bulb in its protective packaging until the wall fitting is ready.

Inspect the arm and finish

Check the metal body for dents, a bent arm or damaged finish before installation. Compare paired fittings together and keep all small mounting parts in their own tray.

1 Check the complete projection

Agree the wall position using the outline of both the metal arm and the chosen bulb. Check it from seated eye level and along the walking route before the installer marks the wall.

2 Prepare the wall support

Assess the wall construction and identify the delivered mounting parts before selecting fixings. The round backplate must not be used to guess hidden hole spacing or the attachment method.

3 Handle the body without the bulb

Keep the bulb protected while the installer secures the metal fitting. Never carry the light by a fitted bulb or bend the curved arm to bring the holder into position.

4 Fit and inspect the bulb


Once the body is secure, fit a suitable bulb while holding the fitting steady. Check that the bulb is clear of surrounding objects and that the arm has not moved.

BLACK & GOLD BARE BULB INDUSTRIAL WALL LIGHT

Use & look after

The bulb determines the visible light

Use an E27 bulb that meets the actual holder limits. Its shape, surface and light colour remain visible because there is no shade. Switch off and let it cool before replacement. Turn the bulb without twisting the holder or arm, and retain the bulb packaging for future matching.

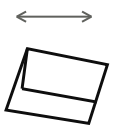

Dust the metal body

Use a soft, dry cloth on the cool arm and backplate. Avoid metal polish and abrasive pads that could remove the applied finish.



Clean the exposed bulb

Let the bulb cool completely and dust it gently with a dry cloth. Never pull on the glass or use it to steady yourself.

If something needs attention

The light feels too bright at eye level	Review the bulb's output and surface finish with the installer or LUNARIA. Choose a suitable replacement within the holder limits; never cover the exposed bulb.
The holder moves during a bulb change	Stop turning the bulb and leave the light off. Have the installer inspect the connection; do not straighten or tighten it by bending the arm.
The bulb stays dark	After switching off and cooling, check the bulb against the holder marking. If a suitable replacement also fails, contact the installer without opening the backplate.

BEFORE SWITCHING ON

- ✓ Fitting secure
- ✓ Fragile parts stable
- ✓ No trapped cable
- ✓ Electrical checks complete