
LUNARIA

LIGHTING LONDON

Wren Glass Globe Pendant Light

FITTING & CARE GUIDE / V2

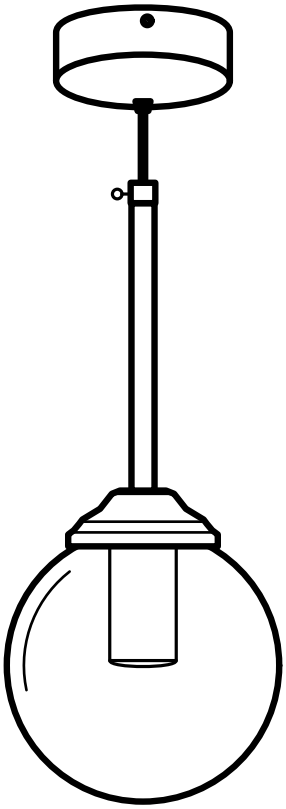


lunarialight.com

hello@lunarialight.com

01 / YOUR LIGHT AT A GLANCE

Wren Glass Globe Pendant Light

Wren is a single pendant: one plain glass ball under a stepped metal cap, on a slim stem, hung on one black flex from a round ceiling rose. It takes one E27 LED bulb, which is not supplied.

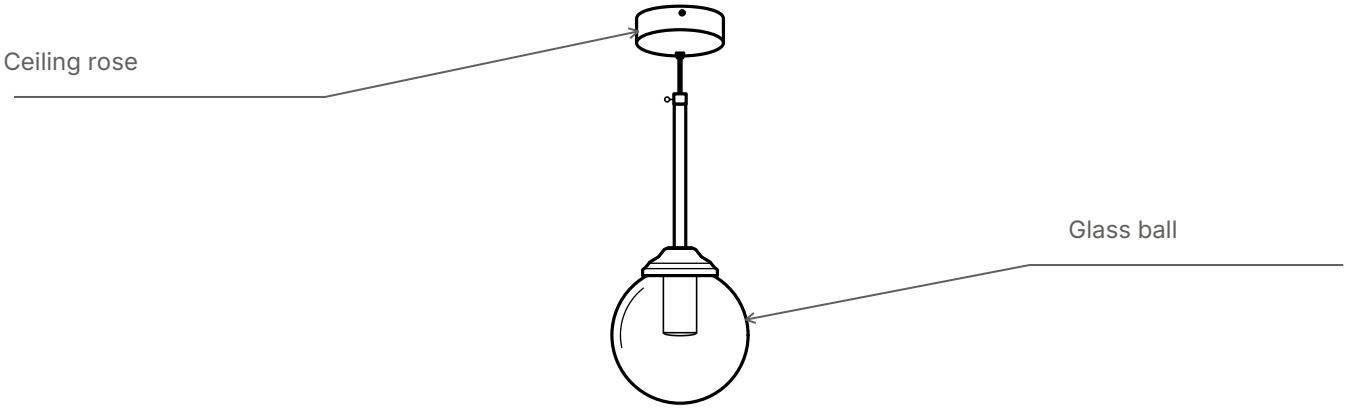

GLASS BALL
15 cm diameter, closed underneath

GLASS COLOURS
Smoky grey, Amber or Clear

METAL
Plated stem and cap; metal ceiling rose

FLEX
Black, 80 cm

CEILING ROSE
Round, 10 cm diameter

BULB
One E27 LED, not supplied

Check the colour of the glass against your order before fitting. On every colour the stem and the cap share one brass-coloured finish, the ceiling rose is shown in the same colour, and the flex is black.

Glass ball

A plain glass ball, closed underneath: its only opening is at the top, under the cap. Hold it with two hands, away from hard edges.

Stem, cap and sleeve

A slim stem stands on the stepped cap. Under the cap a sleeve hangs inside the ball; the bulb fits at its lower end.

Flex and ceiling rose


One black flex carries the light from the round ceiling rose. Keep it free of kinks and sharp bends; never lift the light by it.

Hang it low and close

Decide where the glass should hang before the light goes up. The flex is 80 cm long and the stem and the ball hang below it, so the underside of the glass sits a little over a metre below the ceiling. Under a 2.4 m ceiling the glass sits low: it suits a bedside table, or a worktop under a higher ceiling. It is too low for a place where people walk.


WREN GLASS GLOBE PENDANT LIGHT

Prepare & fit

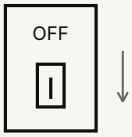


Before fitting

Switch off the lighting circuit at the consumer unit and verify it is dead. Electrical connections and testing must be completed by a competent installer. Keep the light supported until it is securely fixed.

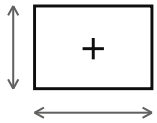

01 Check the position

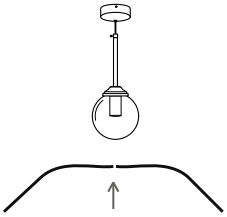

02 Support the body



03 Check before use

Unpack onto a soft surface

Lay the parts on a clean cloth, the glass ball last and away from the table edge. Check the glass for chips or cracks, and the stem, cap and ceiling rose for marks, before anything is fitted.

Choose the bulb first

Wren takes one E27 LED bulb, which is not supplied. Have it ready before fitting, because the bulb sits inside the closed glass ball. Check the marking on the lampholder for its highest bulb rating first.

1 Check the ceiling point

Compare the ceiling rose and any mounting parts received with the existing ceiling point and the support behind it. The rose should sit flat against the ceiling once fitted.

2 See how the parts go together

Before the light goes up, look at how the glass ball, the cap and the sleeve of your light meet, and try the fit gently at a table. If a part seems to be missing or does not hold, stop and contact LUNARIA.

3 Keep the glass supported

Have a second person hold the glass ball while the ceiling rose is fixed and connected, so that its weight never pulls on the flex before the rose is secure.

4 Bulb in, glass secure


Fit the E27 LED bulb and make sure the glass ball is held firmly under its cap before letting go. Check that the ball hangs straight and that nothing is loose before the power is restored.

WREN GLASS GLOBE PENDANT LIGHT

Use & look after

One bulb, your choice

Wren takes one E27 LED bulb of your choice, so the colour and the strength of the light are those of the bulb you fit. The bulb stays in view through the glass. Wren has no switch of its own: it follows the wall switch of its ceiling point. It is not dimmable; do not connect it to a dimmer switch.

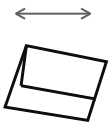

Clean the glass

With the light off and the bulb cool, wipe the outside of the glass ball with a soft, dry cloth. Steady the ball with your other hand so that the flex is not pulled.



Changing the bulb

The ball is closed underneath, so the bulb cannot be changed from below. Switch off, let it cool, and support the glass with both hands whenever the light is opened to change the bulb.

If something needs attention

The light does not come on	Check the wall switch first. If it stays dark, switch off, let the bulb cool and try another E27 LED bulb. Do not open the ceiling rose to look for a fault.
The glass ball does not sit firmly	Switch off and support the ball with both hands; do not leave it hanging loose. Contact LUNARIA with a photo of how the ball, the cap and the sleeve meet on your light.
The glass is marked or chipped on arrival	Keep the packaging, photograph the glass in daylight and contact LUNARIA before the light is fitted. Do not fit a glass ball that is cracked or chipped.

BEFORE SWITCHING ON

- ✓ Fitting secure
- ✓ Fragile parts stable
- ✓ No trapped cable
- ✓ Electrical checks complete